



- Lamp unit..... open and remove expanding rivet (Fig. 2).
- Expanding rivet (Fig. 1)..... remove.
- Covers (Figs. 1 and 2)..... press to side or up. On bumpers with integrated aerial remove cover on left, disconnect plug (fig. 3) and pull through rear bumper toward outside together with rubber grommet.
- Mounting nuts..... unscrew (6 nuts).
- Bumper..... remove toward rear.
- Reinstall..... in opposite order.

Installation note

Insert bumper into lateral guides (Fig. 5).
 Gap dimension **A=5 mm** (Fig. 4), check and adjust, if required.
 On bumpers with integrated aerial remove vent flap on left to facilitate installation of plug.