

### Removal


---

- 1 Unclip sun roof headlining at front with sun roof 3/4 open (4 clips).
- 2 Completely open sun roof.
- 3 Pull out sun roof headlining in forward, upward direction.
- 4 Check upper halves of clips on sun roof headlining.
- 5 Check lower halves of clips on sun roof.

### Installation


---

- 6 Close sun roof and set both sliding parts horizontally.
- 7 Completely open sun roof.

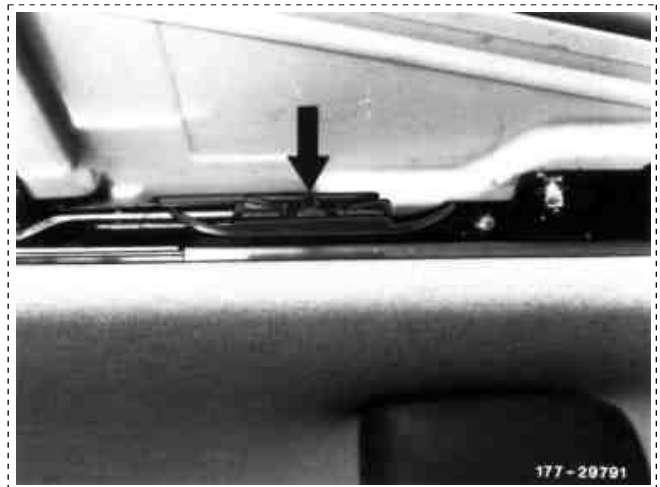

8 Slip in sun roof headlining from front top until clips are abutting against sun roof, at the same time introducing tube into protective tube on sun roof headlining.

9 Close sun roof by half and fasten sun roof headlining at front audibly with clips (4 clips).

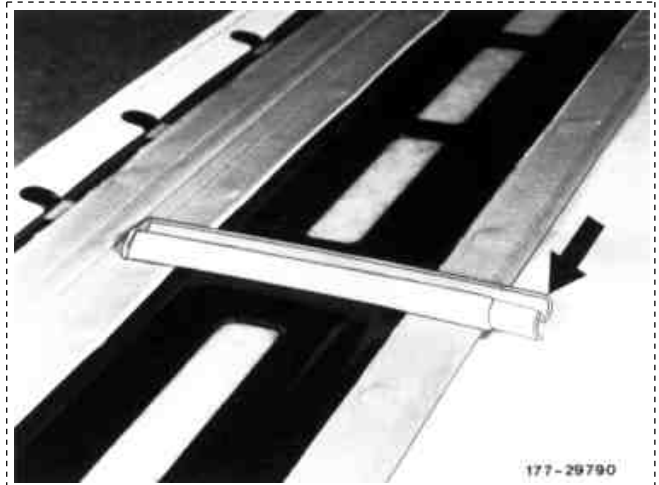

10 Close sun roof, lift approximately halfway at the rear and, in this position, check whether the lateral visors can be perfectly moved in and out.

